User Manual CORDLESS ROBOTIC POOL CLEANER



MODEL: MF-PC01

Subject to update by manufacturer without prior notice

Important Precautions

- 1. Strictly prohibit using the cleaner beyond its operating conditions. Please read the manual carefully, and use it according to the manual. We have no responsibility for any loss or injury caused by improper use.
- Use the accessories recommended or sold by the manufacturer only.
- 3. This model mainly applies to swimming pools with flat floor.
- 4. The cleaner should not be used by children under the age of 8 or people with mental disorders. Please do so under the supervision of the guardian if necessary. Please do not allow children to ride on it or play as a toy.
- 5. Use the original and authorized adapter only.
- It must be replaced by the after-sale professionals if the power line is damaged.
- 7. Do not power on the cleaner when it is outside of the water.
- 8. The power line must be connected to a leakage protective and earthed socket when charging.
- 9. Do not operate the cleaner when there are people in the pool.
- 10. Always clean and wash the filter tray after use.
- 11. Power off the cleaner when maintaining, cleaning or not using it.
- 12. The cleaner should be stored in a cool and ventilated place, away from direct sunshine.
- 13. Charge the battery under the permitted condition. The cleaner should be stored in a cool place when charging, meanwhile do not place or be covered with anything to prevent the damage of internal electrical components caused by overheating of the power unit.
- 14. Only professionals can disassemble the sealing drive assembly of the cleaner.
- 15. Close the pool filtration system before use.
- 16. Slightly water pollution might occur in case grease in motor oil seal leaks.
- 17. The cleaner is only suitable for small pools limited by battery capacity; otherwise it will affect the cleaning effect.
- 18. The cleaner should be charged every three months if it needs to be stored for a long time. Please use the original and authorized adapter only to ensure that the battery power is maintained at 40%-60%. The battery voltage will be lower than the over-discharge protection voltage due to the self-discharge of battery

- if not charging the battery for a long time, which will lead to fatal damage to the battery if continuing too long. Please be careful.
- 19. Prohibit charging the battery under the condition of fire or extreme heat. Do not use or store the cleaner near the heat source.
- 20. Prohibit piercing the cleaner shell with nails or other sharp objects, and prohibit hammering, impacting and throwing the cleaner.

Contents


.Introduction · · · · · · · · · · · · · · · · · · ·
I. Appearance characteristics & structure 04
II.Specifications ······ 04
V. Operation instruction ····· 05
/. Trouble Shooting ····· 1
/I. Packing list ······ 12
/II. Warranty 1:

I. Introduction

The robotic pool cleaner MF-PC01 is a new type of rechargeable automatic cleaning equipment for pools with the function of automatic beaching.

Please read the manual carefully before use so that you can use it correctly.

II.Appearance & structure

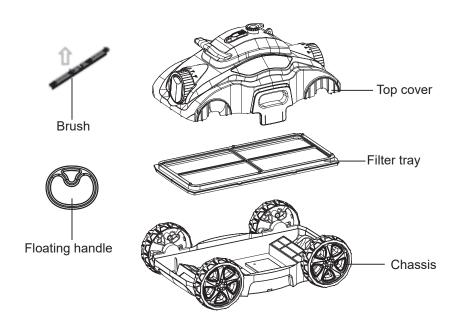

III.Specifications

1. Working voltage: 12.6V

2. Power: 50W

3. Working cycle: 110 min

4. Rated input voltage of adapter: 100Vac-240Vac

5. Input power of adapter: 47Hz-63Hz6. Rated output current of adapter: 2A

7. Charging time: 3.5-4h

8. Battery capacity: 5800mAh

9. Max. cleaning surface: 1026ft² or 100m² 10.Filter capacity: 2641us gal or 10m³/h

11. Filter capability: 180µm

12. Pool water temperature: (50°F) - (95°F) /10°C-35°C

13. Moving speed: appr.70ft/min or 18m/min

14. IP Grade: IPX8

15. Charging environment temperature: (32°F) - (113°F)/0°C 45°C

16. Max. water depth: 6.56ft or 2.0m

17. Size: 16.5(L)*11.4(W)*9.4(H) inches or 420(L)*290(W)*240(H)mm

18. Weight: 10.6lb or 4.8kg

19. Storage condition:

 
Short term(less than 1 month): (-4°F) - (+140°F)/(-20°C)-(+60°C)≤75%RH Medium term (less than 3 months): (-4°F) - (+113°F)/(-20°C)-(+45°C)≤75%RH Long term (more than 3 months):(-4(-4°F) - (+68°F)/(-20°C)-(+20°C)≤75%RH

20. Swimming pool slope: max.15°


IV. Operation instruction

1. Precautions

a. After turning on, the cleaner must be placed in the pool within 20 seconds




 
b. Put into or lift out from pool with the cleaner bottom toward the wall to avoid any possible scratch to the pool.






 C. Install the brush before use to avoid possible dirt leaks.

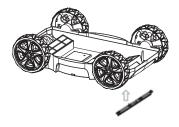



d. Please ensure that top cover of the cleaner is tightly assembled with its chassis.

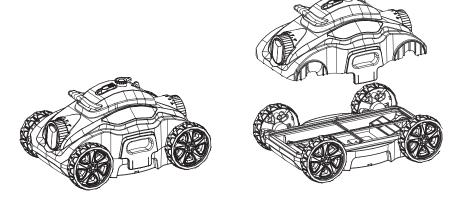

- e. Do not touch the wall to avoid scratching the wall or damaging the cleaner.
- f. when putting into or lift out from pool.

It is necessary to stay on the water surface for 10-15 seconds until water flows


- g. out from the cleaner to the pool before being placed on the ground.
 - Lift the handle or clips of the cleaner out from the pool.
- h. Power off the cleaner after use.

2. Quick operation

- a. Connect the cleaner and home power with adapter and charging line to charge the battery.
 - * Clean the charging port before charging.
 - * Red charging indicator light indicates the battery is charging.
 - * Green charging indicator light indicates charging is finished.
 - * Push the switch to OFF before charging.
- b. Push the switch to ON,the cleaner is power-on and the indicator light is steady blue,then putting it into water. About 20 seconds after power-on,the cleaner begins to work and the blue light flashes.
- c. When battery power almost depletes, the cleaner will move close to pool wall. The indicator light is flashes red about 3 hours before the cleaner completely stop.
- d. Power-off operation: push the switch to OFF and the red or blue light turn off, while the cleaner is power-off. Please timely clean the filter tray after use.

3. Functions and adjustment of nozzles

There are two nozzles on the cleaner, one of them opens once the other closes. Water flows out through the open nozzle to thrust the cleaner to move forward. Adjust the nozzle by turning it to control the moving route.

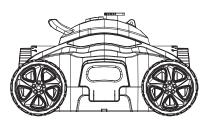


a. Settings of nozzle angle and moving route Sketch: the nozzles of the cleaner are marked with angles $(0^{\circ}-40^{\circ})$.


The cleaner moves in an approximately straight line when the nozzle angle is 0° . The cleaner moves in a more curved line at a larger angle from 0° - 40° .

b. Recommended three CYCLEs and nozzle settings


Setting One: default setting: 0°- 20°, for most of pools.

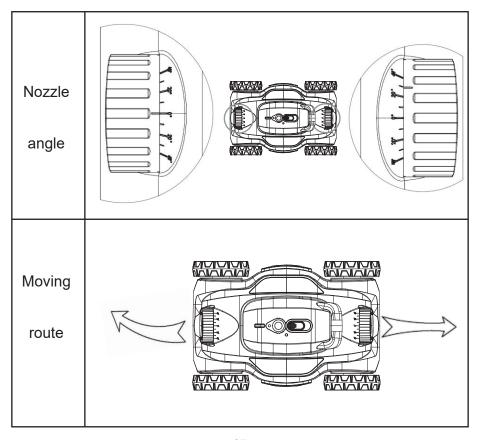

Setting Two: 0°- 40°, when the cleaner does not have a full coverage of pool.

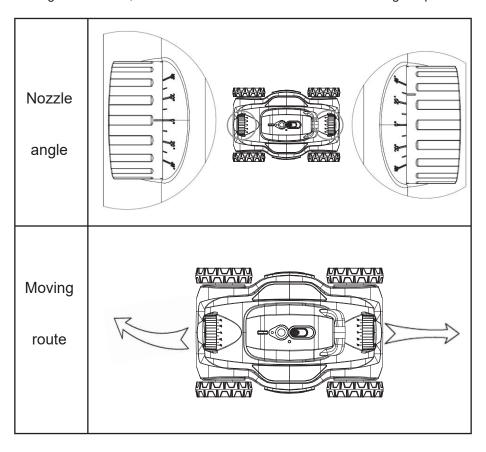


Setting Three: 20°-20°, for round pools.

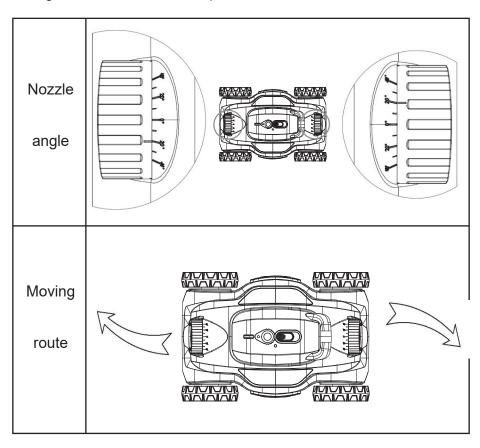


Note: above are recommended settings and different settings might apply to specific pools. So the operator can set according to the principle of nozzle settings and the actual situation of the pool.


4. Clean the filter tray

a. Open the cleaner by clips

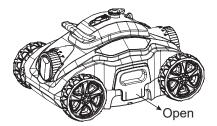

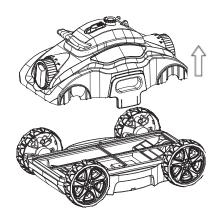


b. Take off the filter tray

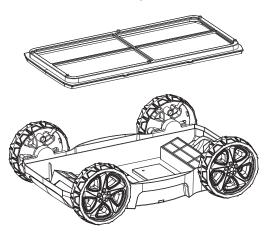


c. Clean the filter tray and chassis




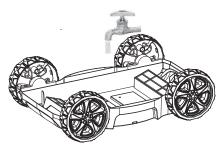

e.Push the clips on

d. Reassemble the cleaner

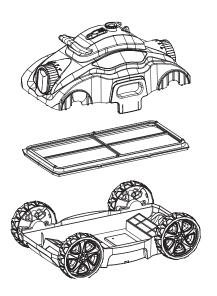

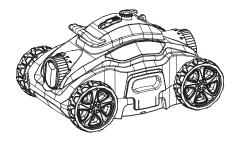

V. Trouble shooting

Symptom	Possible reason	Solution	
The cleaner does not work and the indicator light is red flashes.	Low remaining battery capacity	Charge the battery	
The cleaner does not work and the indicator light does not work.	Battery protection	Charge the battery and power on the cleaner to watch whether the indicator light is on. If not, contact after-sale service.	

Symptom	Possible reason	Solution	
The adapter indicator light does not work.	Adapter damage	Contact after-sale service	
	Unsuitable nozzle angle	Adjust nozzle angle	
The cleaner does not have a full coverage of pool.	Special pool shape	Adjust nozzle to increase angle of deflection	
	Pool water filtration system is open.	Turn off water filtration system	
The working time of the cleaner cannot reach 110 min	Not fully charged	Fully charge the cleaner (needs to last 3.5-4 hours)	
The cleaner cannot reach the shallow water area from the deep water area	The pool slopes more than 15 degree.	Warm Tips:Only suitable for flat-bottom pools, not climbing walls or slopes more than 15 degree.	

VI. Packing list

Item	Name	Model	QTY (pc)	Application	Remark
1	Cleaner body	MF-PC01	1		In carton
2	Adapter		1		In carton
3	User manual		1		In carton
4	Brush		1		In carton
5	Floating handle		1		In carton

VII. Warranty

This product has gone through various quality and safety tests carried out by the technical department of the manufacturer.

Warranty Information:

- 1. The warranty period is 12 months of use on the motors and electrical parts from the date of purchase and established under the terms of the Consumer Code and the legal guarantee against hidden defects and vices in any case applies in the conditions of the articles in the country of purchase.
- 2. Nonqualified person in unauthorized repair services invalidate the warranty.
- 3. Broken parts are not covered by the warranty.
- 4. The warranty only covers factory defects, it does not cover damage caused by misuse of the article.
- 5. Any claim made or repair made during the warranty period will be subject to mandatory presentation of the invoice.

Made in China